



INSTRUCTIONS FOR SYNCHRONISING AND DE-SYNCHRONISING

THE MINI- RDP2 MIXER REMOTE CONTROL

Important

Always keep a few spare batteries at hand for the remote control. Battery type-12 volts.
All the main functions of the Mini Rdp 2 Mixer are available from the remote control.
If the Mini Rdp2 Mixer has not already been synchronised with its remote control,
proceed as follows:

- 1 - Switch the Mini-Rdp2 Mixer on, holding down the  button at the same time down until "L r n" appears on the display.
- 2 - Holding the remote control near the Mini-Rdp2 Mixer (50 cm - 1m), press  on the remote control for a few seconds.
- 3 - Press  on the Mini-Rdp2 mixer (" t 0 0" will appear on the display).

The Mini-Rdp2 Mixer is now synchronised with its remote control.
This synchronisation procedure does not need to be repeated every time the Mini-Rdp2 Mixer is switched off. The remote control will remain synchronised until it is de- synchronised.

DE-SYNCHRONISATION

- 1- Press the  button on the remote control.
- 2- Make sure the Mini-Rdp2 Mixer is really switched off properly then press the  and  buttons on the remote control simultaneously (the led on the remote control should blink green and red).

The remote control will now no longer transmit to the Mini-Rdp2 Mixer.
To reactivate the remote control, it must be synchronised again.

REMOTE CONTROL BATTERY CHARGE LEVEL INDICATOR

The remote control has a green and red led which not only indicates when commands are transmitted to the Mini-Rdp2 Mixer but also the battery charge level.

Green led lit during transmission = battery charged.
Led Red or off during transmission = battery flat.