

WARRANTY CONDITION

PLURIFON guarantees that the products delivered are free from defects in materials and workmanship for a period of 24 months from the date of invoice to distributor.

If when under warranty the products is found to be faulty, PLURIFON will repair it without any costs for labour or parts replace according to the conditions stated below. PLURIFON reserves the right, in some cases, to replace the faulty product with another of the same kind or against partial payment of it.

This warranty is valid for all EEC and NON-EEC countries.

Transport costs for the product under warranty will be PLURIFON as far as the italian forwarding agent chosen by the distributor.

Conditions:

1) The warranty will be valid only if the product carries a label with the serial number corresponding to the date of our sales invoice.

PLURIFON reserves the right to refuse acknowledgement of the warranty if the label with serial numbers has been removed or tampered with after the original purchase of the product by the customer or distributor.

2) THIS WARRANTY DOES NOT COVER:

- Periodic checks, maintenance and repairs or replacements of parts made necessary by normal wear and tear.
- Damage to the products caused by: negligence and improper use, including but not limited to use. Of the products for motives other than those for which it has been designed and maintenance of the product itself; repair carried out by unauthorised personnel outside PLURIFON.
- Accidents, acts of god, including but not limited to falls, lightning, water, heat source unexpected events, including but not limited to, falling, lightning, water, heat sources and inadequate ventilation.

Date of consignments.....Stamp of dealer.....

Invoice N°.....

CONCISE INSTRUCTIONS FOR DIGITAL AUDIO PLAYER

“MICRO RDP - 8 WATT ”

CLASS D- High Efficiency

With remote control

Delivered as of 01-01-2015



WARNINGS!

Read the instruction manual.

Instructions for the correct use of the:

“ MICRO RDP ” CLASS “D” Higt efficiency digital audio player

- 1- Put carefully in connection external (positive + and negative -) because, even if our players audio have a circuit protection against reversal of polarity, the protections is not guaranteed to 100%.
- 2 – **Do not touch the gold parts of the mini-card2 with your hands!**
Any build-up of electrostatic charge on your body, especially in winter, could irreparably damage the mini card 2.
When not in use, **leave the mini-card2** in the audio player or keep it in its anti-static holder.
We will not accept and will consequently refuse all responsibilities with regard to damages to the card, including feasible contamination of the data, through improper use.
- 3 – **Do not bend or squash** the mini-card2.
- 4 – Always **insert and extract** the mini-card2 with the audio player switched off.
- 5 –**Protect** the audio player and the mini-card2 from direct sunlight, from rain and from electrostatic charges.
- 6 –**Should the audio player be accidentally dropped in water, switch it off immediately, dry it and send it as quickly as possible to the “Plurifon” service centre.**
If the water in which it is feasibly dropped is salty or brackish, the Micro-Rdp should be opened by removing the 2 fixing screws and rinsed thoroughly with soft water, dried and then sent as quickly as possible to the “Plurifon” service centre.

Plurifon accepts no liabilities for such damage!

Always take the batteries out when the player is not used in order to avoid damages through acid leakage.

Information for users

This product complies with Directive 2002/96/EC.

The symbol of the crossed-out garbage bin means that the product must be treated separately from household waste at the end of its useful lifetime and must be handed over to a differentiated waste collection centre of electrical and electronic equipment, or sent back to the dealer when purchasing a new equivalent device.



The user is responsible for handing the product over to waste collection facilities at the end of its lifetime.

Differentiated waste disposal, subsequent recycling of old equipment, treatment and disposal in an environment friendly manner all contribute in avoiding possible negative effects on the environment and on human health and also favour recycling of the material making up the product. For further information concerning available waste collection methods, please contact your local waste disposal service or contact the shop from which you purchased the product.

Plurifon s.n.c. is a registered AEE number IT 0902 000 000 5780 and certifies that the product has been placed on the market at a later date to August 13, 2005.

ATTENTION

II MICRO RDP 8 Watt is not suitable for the reproduction of low frequency sound such as WOOD PIGEON, DUCKS and GEESE.

Using it at high volume these types of songs not only does not reproduce the sound faithfully, but also damages the built-in loudspeaker, which in this case is not covered by warranty.

For faithful reproduction of WOOD PIGEON and TURTLE DOVE the best speaker is the DAF 130, for DUCKS and GEESE the use of horn such as the TD 120N and TR-105N is indispensable.

Available accessories:



Horn speaker for MICRO RDP

Horn speaker to be grafted on speaker built MICRO RDP. Increases significantly the sound level and improves the frequency reproduction medium.

BATTERY CONNECTION

To avoid serious damage to the MICRO-RDP, connect the internal battery or external battery pack must be made with the MICRO-RDP off (switch to “off”).

We recommend using the following batteries:

1-rechargeable “Plurifon” Polimer long -life lithium.

Or this 9 volt alkaline batteries:

- Duracell “plus” and “plus M3”, type: MN 1604
- Energizer “ultimate”, type: 6lr61

SWITCHING ON THE MICRO-RDP AUDIO PLAYER

- 1 – Put the battery in the dedicated compartment or power the audio player with an external 12-16 Volt battery.
- 2 – Put a mini-card2 in the relative slot with the audio player switched off and with the gold surface facing downwards.
- 3 – Turn the black main power toggle switch to the left (ON) to switch the audio player on; the green led will light up (provided the battery is charged).
- 4 – To start playback of a bird call, press the  button on the audio player’s keypad (playback will begin from track 1) or the  button (playback will begin from the track with the highest number on the card).

N.B. The MICRO-RDP is equipped with an outlet for the connection of a speaker.

Outside when this is connected the internal speaker is automatically disabled.

The inclusion of an external speaker leads to an increase in power of MICRO RDP up to 10 Watt and a resulting increase consumption of battery.

SELECTING CALL

Each time the  and  keys are pressed, the selection moves one track forward or one track back

STOPPING PLAYBACK

To stop playback of a call, press  or 

VOLUME

Press the  or  buttons to adjust playback volume.

PAUSING AND RESUMING

Press the pause button  to pause or resume playback.
The pause button interrupts playback of a call in a certain point and resumes playback from the same point.

MICRO-RDP BATTERY CHARGE LEVEL INDICATOR

The LED under the word “battery” indicates the battery charge level

Green LED= battery charged

Green-red Blinking LED= Battery almost flat

Red LED on= battery flat

USING THE MICRO-RDP WITH REMOTE CONTROL

Important!

Always keep a few spare batteries at hand for the remote control

Battery type:12 Volt alkaline battery e23a, gp23a, etc.

All the main functions of the Micro-Rdp are available from the remote control. If the Micro-Rdp has not already been synchronised with its remote control, proceed as follows:

1- Switch the Micro-Rdp on, holding down the  button at the same time until the green Led blinks.

2- Holding the remote control near the Micro-Rdp, press  on the remote control for a few seconds.

3-Press  on the Micro-Rdp (the Led will remain lit steady)

The Micro-Rdp is now synchronised with its remote control. This synchronisation procedure does not need to be repeated every time the Micro-Rdp is switched off. The remote control will remain synchronised until it is de-synchronised.

DE-SYNCHRONISATION

1-press  on the remote control.

2-Make sure the Micro-Rdp is really switched off properly, then press the  and  buttons on the remote control simultaneously (the Led on the remote control should blink red and green)

The remote control will now no longer transmit to the Micro Rdp. To reactivate the remote control, it must be synchronised again.

REMOTE CONTROL BATTERY CHARGE LEVEL INDICATOR

The remote control has a red and green led which not only indicates when the commands are transmitted to the Micro-Rdp but also the battery charge level.

Red or green led lit during transmission = battery charged

Led off during transmission = battery flat

N.B. = To ensure the best operating efficiency of the remote control (maximum transmission distance), both the Micro-Rdp and the remote control must be fitted with their respective aerials and the aerials must always be in a vertical position (facing upwards). Obstacles, nearby high voltage power lines or operational mobile phones, underground use of the Micro-Rdp, rain and fog may reduce the operating range of the remote control.

SELECTING CALL TRACKS ABOVE N°. 10

Press the  key, then press the numbers making up the track selected (e.g. For track no. 12 press     ).

PAUSING AND RESUMING FROM THE REMOTE CONTROL

Press the pause button  to pause or resume playback from the point in which it was paused. The “pause” function also proves useful when you want to temporarily interrupt the playback of a call track number above “10”, as it means that playback can be resumed by pressing just one button rather than three.